

# IMPORTANT PLEASE READ

## Cordless Cellular Shade Operating Instructions

Thank you for purchasing a cordless Cellular Shade. This lift system eliminates the need for cords and provides a more attractive appearance. Cordless shades are the safest window shade alternative; ideal for homes with children and pets.

**To maintain optimum performance of your cordless shade, we recommend you operate your shade daily.**

In the event your shade is in the lowered position for an extended period of time, the fabric of the shade may relax and resist lifting. This is a natural occurrence with fabric shades. When lifting the shade after an extended period of time, you may notice the fabric billowing (puff out) toward you. This is temporary and can be corrected by completely raising the shade and then operating the shade several times. This will allow the fabric to go back to its natural state, and your cordless shade will then operate as designed.



If the shade has been in the fully raised position for an extended period of time, the shade may have the tendency to “bounce up” above the desired length of the shade. This is temporary and can be corrected by completely raising the shade and then operating the shade several times. This will allow the fabric to go back to its natural state, and your cordless shade will then operate as designed.

Always lift the shade from the middle of the rail (handle is suggested). This will help eliminate any unevenness that may occur. If the shade is over 48" in width (52" Pleated), we recommend using both hands, shoulder width apart (two handles are suggested), to lift the shade.

Bracket placement is essential to the performance of cordless Cellular Shades. Please follow the installation instructions in your manual closely.


# IMPORTANT PLEASE READ

## Cordless Cellular Shade Operating Instructions

Thank you for purchasing a cordless Cellular Shade. This lift system eliminates the need for cords and provides a more attractive appearance. Cordless shades are the safest window shade alternative; ideal for homes with children and pets.

**To maintain optimum performance of your cordless shade, we recommend you operate your shade daily.**

In the event your shade is in the lowered position for an extended period of time, the fabric of the shade may relax and resist lifting. This is a natural occurrence with fabric shades. When lifting the shade after an extended period of time, you may notice the fabric billowing (puff out) toward you. This is temporary and can be corrected by completely raising the shade and then operating the shade several times. This will allow the fabric to go back to its natural state, and your cordless shade will then operate as designed.

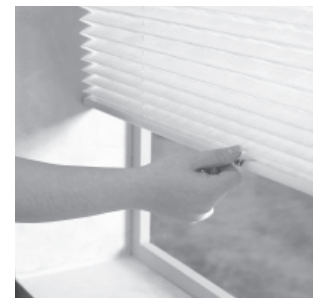

If the shade has been in the fully raised position for an extended period of time, the shade may have the tendency to “bounce up” above the desired length of the shade. This is temporary and can be corrected by completely raising the shade and then operating the shade several times. This will allow the fabric to go back to its natural state, and your cordless shade will then operate as designed.

Always lift the shade from the middle of the rail (handle is suggested). This will help eliminate any unevenness that may occur. If the shade is over 48" in width (52" Pleated), we recommend using both hands, shoulder width apart (two handles are suggested), to lift the shade.

Bracket placement is essential to the performance of cordless Cellular Shades. Please follow the installation instructions in your manual closely.