


Bali® Measuring Guide for Cellular Shades and Pleated Shades

Tools and Tips

- Steel tape measure — do not use cloth tape
- Pencil
- Bali Measurement Worksheet – visit baliblinds.com
- How to Measure Videos – visit baliblinds.com
- Measure each window and identify window locations – size variances are common
- Round measurements to the nearest 1/8"
- Clearly record measurements – width vs. height

1/8"
1/4"
3/8"
1/2"
5/8"
3/4"
7/8"




Choose a Mount Type: Inside Mount or Outside Mount


(See next page if you need help deciding which mount is best for your windows.)

Inside Mount


Window treatments are installed completely inside the window casing.

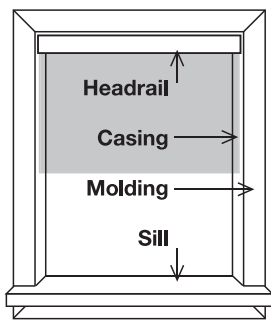


Inside Mount Blind

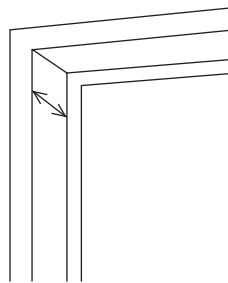

Depth

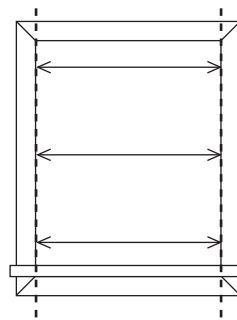

Width

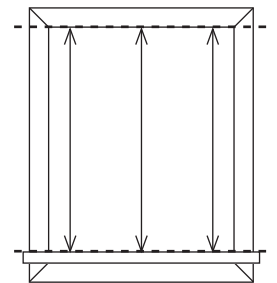


Height


- 1 **Measure Depth:** See the chart on next page to determine if window casing has enough depth for an inside-mount window treatment.
 - 2 **Measure Width:** Measure the inside width of window casing in three places. Record narrowest measurement.
 - 3 **Measure Height:** Measure the inside height from the top of window casing to top of sill in three places. Record longest measurement.
- Note:** Do not take any deductions for clearance. The manufacturer will take necessary deductions for a perfect fit.

Outside Mount


Window treatments are installed outside the window casing. Mount directly to wall or molding.

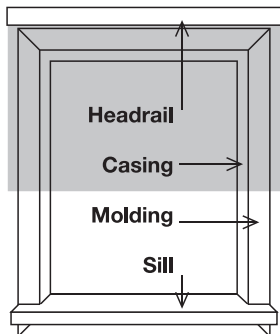


Outside Mount Blind

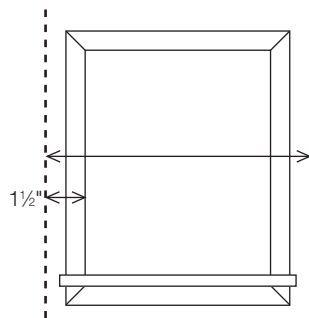

Width

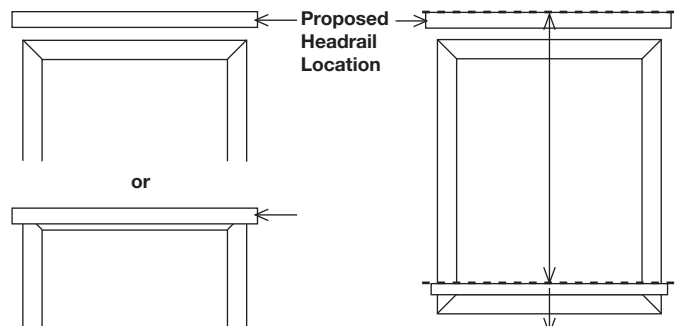

Headrail Location

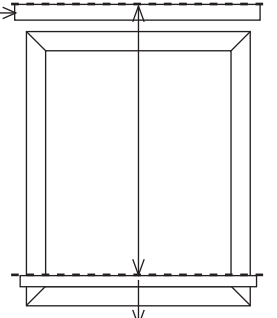

Height

- 1 **Measure Width:** Measure width to be covered. We recommend 1 1/2" overlap on each side (3" total) for optimum light control and privacy. Record measurement.
- 2 **Determine Headrail Location:** Determine if headrail will be on molding or above molding and mark spot.
- 3 **Measure Height:** Measure height to be covered from top of headrail location to top of sill or lower if overlap is desired for light control and privacy. Record measurement.

Note: The manufacturer makes NO deductions on outside-mount installations.

Mounting Considerations

Reason for Choosing Inside Mount

Clean Look

- Inside-mount treatments are installed inside the window casing, showcasing attractive window trim.
- The window opening frames the window treatment for a finished, clean appearance.

Allows Sill Space on Deep Windows

- In some deep-set windows, the window treatment can be installed to allow plants or other items to be placed in front of the window treatment on the sill.

Limitations of Inside Mount

Light Gaps

- A small deduction in the width is taken at the factory to allow for proper operating clearance, and this causes a small gap on each side of the window treatment, affecting the treatment's ability to darken a room.

Obstructed View

- The stack (compressed portion of the window treatment when fully raised) will obstruct part of the view from the window.

Architectural Obstacles

- Obstacles such as handles and cranks can interfere with the operation of inside-mount treatments.

Reason for Choosing Outside Mount

Improve Privacy and Light Control

- Light gaps on the side of the window treatment can be substantially diminished or eliminated.

Fewer Installation Limitations

- Outside-mount window treatments are ideal for covering non-square windows.
- Outside-mount window treatments are installed higher than the window opening, preventing the stack from obstructing light or view when fully raised.

Architectural Obstacles

- Outside-mount window treatments can clear obstacles like handles and cranks.

Enlarge the Look of a Small Window

- Outside mount window treatments enlarge the look of a small window by increasing overlap above and below the window.

Hide Window Trim

- Outside-mount window treatments provide an easy way to hide unattractive window trim.

Limitations of Outside Mount


Required Surface Above Window Frame

- Outside-mount brackets require at least 2" of flat surface above your window or on the window frame for mounting brackets; Projection brackets or shims can be ordered to clear frame or molding.

Inside Mount Window Casing Minimum Depth Requirements

A. Flush Mount: If the window casing is deep enough to mount the entire headrail inside of it, this is called a flush mount.

B. Partially Recessed: A partially recessed window treatment is when the depth of the window casing is less than the space necessary for a flush mount.

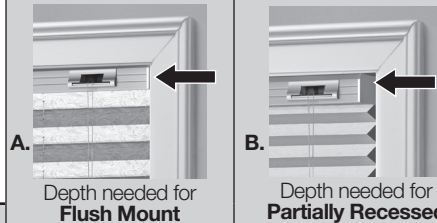

Cellular and Pleated Shades	Control Type	Depth needed for Flush Mount	Depth needed for Partially Recessed
3/8" Cellular Shades • Single Cell • Double Cell	Standard Cord Lift	1 7/8"	3/4"
	Corded Bottom Up/Top Down		
	Cordless and Motorization		
	Continuous-loop Lift		
3/4" Cellular Shades • Single Cell	Cordless Bottom Up/Top Down	2 1/8"	1 1/8"
	Standard Cord Lift		3/4"
	Corded Bottom Up/Top Down		
	Cordless and Motorization		
Continuous-loop Lift			
1" Pleated Shades	Cordless Bottom Up/Top Down	2 1/8"	3/4"
	Standard Cord Lift		
	Corded Bottom Up/Top Down		
	Cordless		
2" Pleated Shades	Continuous-loop Lift	2 1/8"	1 1/8"
	Motorization		
	Standard Cord Lift	3/4"	
	Corded Bottom Up/Top Down		
Cordless			
Continuous-loop Lift			

Please call 1-877-792-0002 for window casing depth requirements of specialty Cellular or Pleated Shades not listed in the above chart.

Measuring and Ordering Worksheet

Window #1 _____
(location)

Measuring

For Inside Mount

Depth of window casing: _____

Measure width of window in 3 places and circle the narrowest width below:

Width #1: _____

Width #2: _____

Width #3: _____

Measure height of window in 3 places and circle the longest height below:

Height #1: _____

Height #2: _____

Height #3: _____

For Outside Mount

Width: _____

Height: _____

Ordering

Mount Type: Inside Outside

Ordering Width: _____

Ordering Height: _____

Type of Blind or Shade: _____

Style Name: _____

Color Number: _____

Controls & Options to consider:

- Corded
- Cordless
- Bottom Up/Top Down
(Cellular, Pleated, Roman, and Natural Shades)
- Sun Up/Sun Down
(Cellular & Pleated Shades only)
- Cornice: _____
- Valance: _____
- Other: _____

Window #2 _____
(location)

Measuring

For Inside Mount

Depth of window casing: _____

Measure width of window in 3 places and circle the narrowest width below:

Width #1: _____

Width #2: _____

Width #3: _____

Measure height of window in 3 places and circle the longest height below:

Height #1: _____

Height #2: _____

Height #3: _____

For Outside Mount

Width: _____

Height: _____

Ordering

Mount Type: Inside Outside

Ordering Width: _____

Ordering Height: _____

Type of Blind or Shade: _____

Style Name: _____

Color Number: _____

Controls & Options to consider:

- Corded
- Cordless
- Bottom Up/Top Down
(Cellular, Pleated, Roman, and Natural Shades)
- Sun Up/Sun Down
(Cellular & Pleated Shades only)
- Cornice: _____
- Valance: _____
- Other: _____

Window #3 _____
(location)

Measuring

For Inside Mount

Depth of window casing: _____

Measure width of window in 3 places and circle the narrowest width below:

Width #1: _____

Width #2: _____

Width #3: _____

Measure height of window in 3 places and circle the longest height below:

Height #1: _____

Height #2: _____

Height #3: _____

For Outside Mount

Width: _____

Height: _____

Ordering

Mount Type: Inside Outside

Ordering Width: _____

Ordering Height: _____

Type of Blind or Shade: _____

Style Name: _____

Color Number: _____

Controls & Options to consider:

- Corded
- Cordless
- Bottom Up/Top Down
(Cellular, Pleated, Roman, and Natural Shades)
- Sun Up/Sun Down
(Cellular & Pleated Shades only)
- Cornice: _____
- Valance: _____
- Other: _____

For next steps and where to buy visit:

baliblinds.com